

USER'S MANUAL

LINT REMOVER

Model: OR-LR02

ENGLISH GB

OVERVIEW OF THE COMPONENTS

1. ON/OFF switch
2. Battery compartment
3. Transparent lint container
4. Shearing foil



IMPORTANT SAFEGUARDS

Please read contents of this manual carefully before any operation.

This item requires 2 “AA” batteries.

Please take out batteries if you keep the item unused for a long period of time.

INSTRUCTION FOR USE

Lay your clothes on a flat level surface, preferably an ironing board or pad. Open the battery cover, insert batteries according to the polarity marking and close the battery cover. Move the on/off switch to the “ON” position to turn the device on and begin to shaver lint or fuzz off your clothes, and to the “OFF” position to turn it off.

The clear fluff box will collect lint and fibers removed from clothes and can be easily removed to discard the lint fibers.

CARE AND CLEAN

Please check the polarity of the batteries to make sure they are in right positions.

Check the battery power to make sure they do not need to be replaced with new ones.

Inspect the blade and net by gently pressing on the net to make sure the blades and net are not hitting each other.

Clean the blades after each shave.

ATTENTION

Keep away from children.

The item cannot be used as an ordinary electrical beard shaver.

Don't use the item to shave delicate clothing.

Do not clean this item with water or other chemical solutions.

Turn off the power before taking out the blade. To do this, unscrew the cutting foil in an anticlockwise direction.